


# Installation guidance

Gyproc® EasiFill

## Patching and repair

### Step 1

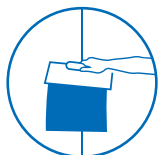

Prepare background surface for patching by removing loose material and cleaning the surface

### Step 2



Add approx. 6.5 litres of clean water per 10kg bag to a clean mixing bucket. Gradually add the powder stirring continuously until a smooth creamy consistency is achieved

### Step 3



Fill holes and cracks with filling knife flush with the surface

For deep holes allow first coat to set and dry before applying final coat

### Step 4



Once all coats have fully dried, sand down to a smooth flat finish

#### Note:

Ensure that the product is suitable for the background to which it is being applied by using the Repair Range Selector Guide.

Check Gyproc EasiFill variant packaging for working time and setting time information.

**Times and processes are given as guidance. On site practice may vary.**