


Installation guidance

Gyproc® Ready Mix Joint Cement

Hand applied

Step 1

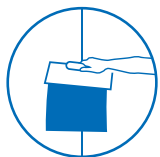

Ensure that boards have been prepared for jointing

Step 2



Stir before use



Dilute if preferred with clean water; increased dilution increases shrinkage

Step 3



Apply to the joint in approx. 100mm wide band, centre and bed in Gyproc Joint Tape with a jointing knife or trowel

Step 4



Allow previous coats to dry fully before applying additional coats, removing high spots before feathering edges 50mm beyond the previous coat

Final joints should be approx. 350mm wide for flat joints.
Finished butt or end joints should be approx. 600mm wide

Step 5



Once all coats have fully dried, sand down to a smooth flat finish

Step 6



Seal the boards and joints with Gyproc Drywall Primer or Gyproc Drywall Sealer ready for decoration

Note:

If using Gyproc Ready Mix Joint Cement for the finishing stages of jointing, refer to step 4 onwards.

Gyproc Ready Mix Joint Cement is also suitable for mechanical application.

Times and processes are given as guidance. On site practice may vary.