


Installation guidance

Gyproc® Drywall Sealer

Roller application

Step 1

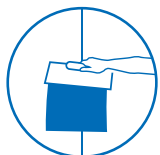

After joint treatment is complete, clean down boards and ensure they are free from dust

Step 2



Stir before use

Step 3



Apply one coat with a brush or medium pile roller to protect plasterboards from UV degradation and preparation for application of wallcoverings

Protect adjacent surfaces from splashes and remove any spillage immediately

Step 4



Apply a second coat to provide a vapour control layer if needed. Leave to dry for at least 3 hours between coats

Step 5



Wait until dry and then begin decoration

Note:

If using vinyl or low permeability wallcoverings there is a risk of trapping moisture in the adhesive so Gyproc Drywall Primer should be used instead.

This product is designed for plasterboard surfaces only.

Times and processes are given as guidance. On site practice may vary.