

# Installation guidance


Thistle® Bond-it

**British Gypsum**

SAINT-GOBAIN

## Roller application

### Step 1

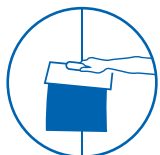

Prepare the surface by cleaning to ensure it is free from dust and other contaminants

### Step 2



Stir by hand or with a mechanical whisk as contents may settle in storage. Do not dilute

### Step 3



Protect adjacent surfaces from splashes and remove any spillage immediately

Apply to the background with a short pile roller, using only one coat of Thistle Bond-it

### Step 4



Allow Thistle Bond-it to fully dry, minimum 24 hours, before applying plaster

#### Note:

**Thistle Bond-it should not be used with Thistle HardWall or Thistle DriCoat.**

Ensure that the product is suitable for the background eg;

- Low suction backgrounds
- Cast concrete
- Painted and glazed surfaces
- MR grade plasterboards

**Times and processes are given as guidance. On site practice may vary.**