


# Installation guidance

Gyproc® QuickSand

## Hand applied

### Step 1

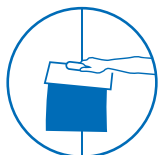

Ensure that boards have been prepared for jointing

### Step 2



Add approx. 12.25 litres of clean water per bag to a clean mixing bucket. Gradually add the powder stirring continuously until a smooth creamy consistency is achieved

Leave to stand for 5 to 10 minutes before final mixing

### Step 3



Apply to the joint in approx. 100mm wide band, centre and bed in Gyproc Joint Tape with a jointing knife or trowel

### Step 4



Allow previous coats to dry fully before applying additional coats, removing high spots before feathering edges 50mm beyond the previous coat

Final joints should be approx. 350mm wide for flat joints. Finished butt or end joints should be approx. 600mm wide

### Step 5



Once all coats have fully dried, sand down to a smooth flat finish

### Step 6



Seal the boards and joints with Gyproc Drywall Primer or Gyproc Drywall Sealer ready for decoration

#### Note:

If using Gyproc QuickSand for the finishing stages of jointing, refer to step 4 onwards once mixed.

Gyproc QuickSand is also suitable for mechanical application.

**Times and processes are given as guidance. On site practice may vary.**